

INSTALLATION INSTRUCTIONS

PROCEED WITH CAUTION


Once attached, LOCK BLØK cannot be repositioned.

Before attempting to attach LOCK BLØK permanently to your classroom door, we highly recommend that you do a trial placement. Check to see how it works. Does it prevent the lock from engaging when the door is pulled closed? How far back from the edge of the door does it need to be so that it doesn't interfere with the door closing properly?

1. Face the side of the door that comes in contact with the latch mechanism. For most classrooms, this will be the inside surface of the door.
2. Open the door and secure it in an open position. Clean and dry the area of the door where you are going to attach LOCK BLØK.

Think about whether or not you want LOCK BLØK to be within reach of your students.

3. Place the black rubber slide in the plastic housing.
4. If the door knob or handle is on the left side, move the rubber slide to the left. If the door knob or handle is on the right side of the door, move the slide to the right.

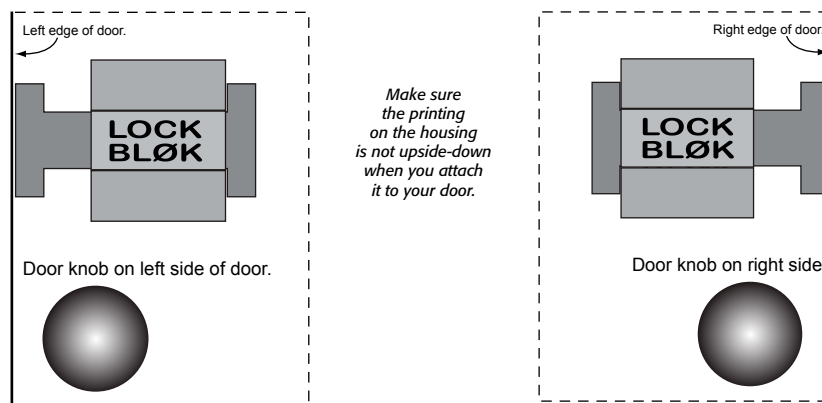

5. On the back of the plastic housing you will find two adhesive strips. Remove the red paper backing from each strip.
6. Without allowing the adhesive to come in contact with the door surface, align the edge of the rubber slide so that it is approximately an 1/8" away from the edge of the door.
7. Check to ensure that the plastic housing is level. Press the housing firmly against the door so that the adhesive forms a strong bond.

New Management, Inc. assumes no liability for improper placement or removal of LOCK BLØK nor makes any claims as to the level of security provided by this product. It is the user's obligation to ensure that LOCK BLØK does not violate any fire safety codes that may exist or apply. Should LOCK BLØK prove defective following purchase, you may return it to us for a free replacement. Questions? Give us a call. 888-639-6468